



TECHNICAL HANDOUT

CHANGING THE DATE AND TIME ON THE Panasonic A-series (309, 616, 824, 1232)

FROM EXTN 10

TO CHANGE THE TIME

1. Leaving the handset on hook
2. Press **ON/OFF**
3. Dial ***5**
4. Enter the hour (**from 00 to 23**)
5. Enter the minutes (**from 00 to 59**)
6. Press **ON/OFF**

TO CHANGE THE DATE

1. Leaving the handset on the hook
2. Press the **ON/OFF** button
3. Dial ***000**
4. Dial **7 #**
5. Dial ***102**
6. Enter the Year (eg **00**), Month (**01 to 12**) then Day (**01 to 31**)
7. Press the **#** key to store
8. Press **ON/OFF** to exit

If you have any problems with the above, please call our

Support Department on 08450 34 55 66