



## **TECHNICAL HANDOUT**

### **CHANGING THE DATE AND TIME ON THE Panasonic DBS**

**From a display phone on Extension 200**

1. Press **ON/OFF**
2. Press **recall** (or **program** if you have a newer style phone)
3. Press **# 3**
4. Enter the day **(01-31)**
5. Enter the month **(01-12)**
6. Enter the year **(20--)**
7. Enter the hour **(00-24)**
8. Enter the minutes **(00-59)**
9. Then press **ON/OFF**

**If you have any problems with the above, please call our**

**Support Department on 08450 34 55 66**