


TECHNICAL HANDOUT

CHANGING THE DATE AND TIME ON THE Panasonic KXTDA


1 Enter Programming Mode



Note - Default password is 1234 - call du Pré Support if your password does not work

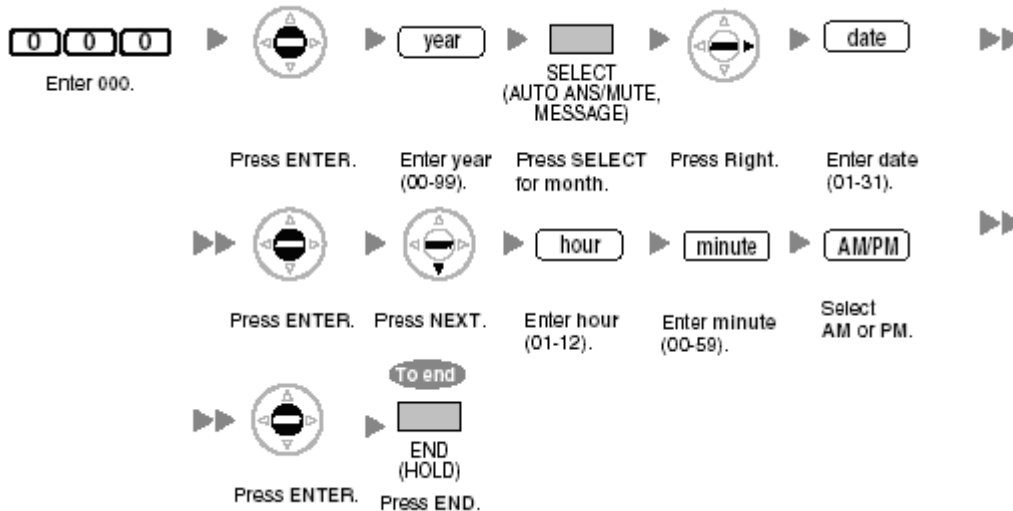

2 Exit programming mode

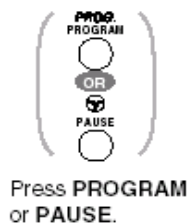

If you have any problems with the above, please call our

Support Department on 08450 34 55 66