

## TECHNICAL HANDOUT

### CHANGING THE DATE AND TIME ON THE

#### Panasonic KXTD 816 & 1232

#### ***FROM A DIGITAL KEYPHONE WITH A DISPLAY***

1. Leave the handset on the hook
2. Press the **PROGRAM** button and dial \* \*1234
3. Dial **000** then press **NEXT**
  
4. Enter the Day (**01** to **31**) then press - >
5. Press **SEL+** until desired Month is displayed then press - >
6. Enter the year (**i.e. 00**) then press - >
  
7. Press **SEL+** until the desired Day is displayed
8. Press the **AUTODIAL / STORE** button then press **NEXT**
9. Enter the hour (**1** to **12**) then press - >
  
10. Enter the minutes (**00** to **59**) then press - >
11. Press **SEL+** to chose **AM** or **PM**
12. Press **AUTODIAL / STORE**
  
13. Press **PROGRAM** to exit

**If you have any problems with the above, please call our**

**Support Department on 08450 34 55 66**