



TECHNICAL HANDOUT

CHANGING THE DATE AND TIME ON THE

Panasonic KXT 1232

Programmed from a display phone at extension 21 or 201.

1. Leave the handset on hook
2. Set the **memory** switch on the back of the phone to **program**
3. Dial **0**

4. Enter the year (**00 to 99**)
5. Enter the month (**01 to 12**)
6. Enter the date (**01 to 31**)

7. Enter the day of the week **0=Sun 1=Mon 2=Tue 3=Wed 4=Fri 5=Fri 6=Sat**

8. Enter the hour (**01 to 12**)
9. Enter the minute (**00 to 59**)
10. Enter **0** for **AM** or **1** for **PM**

11. Press the **AUTODIAL STORE** button
12. Return the switch on the back of the phone to the set position

If you have any problems with the above, please call our

Support Department on 08450 34 55 66