



TECHNICAL HANDOUT

CHANGING THE DATE AND TIME ON THE

Panasonic KXT 206

FROM EXTENSION 21

TO CHANGE THE TIME

1. Lift the receiver
2. Dial **77**
3. Enter the hour (**01 through 12**)
4. Enter minute (**00 through 59**)
5. Enter **0 for AM** or **1 for PM.**
6. Dial #

TO CHANGE THE DATE

1. Lift the receiver
2. Dial **76**
3. Enter the year (**2 digits**)
4. Enter date (**01 through 31**)
Enter day of week **1=Sunday 2=Monday 3=Tuesday**
4=Wednesday 5=Thursday 6=Friday 7=Saturday
6. Dial #

If you have any problems with the above, please call our

Support Department on **08450 34 55 66**