



TECHNICAL HANDOUT

CHANGING THE DATE AND TIME ON THE Panasonic KXT 308 & 616

Programmed from a display keyphone at extension 21

TO CHANGE THE TIME

1. Lift the handset
2. Dial **77**
3. Enter the hour (**01 to 12**)
4. Enter the minute (**00 to 59**)
5. Enter **0** for **am** or **1** for **pm**
6. Press the **#** key
7. Hang up

TO CHANGE THE DATE

Unfortunately, this is not a user feature and is a function which should only be accessed by a Panasonic trained Engineer.

If you do need the system date setting changed, please contact our Sales Department on 01635 55 55 50.

If you have any problems with the above, please call our

Support Department on 08450 34 55 66