

TECHNICAL HANDOUT

CHANGING THE DATE AND TIME ON THE Panasonic S-ICX & ICX

Programming to be done from the operator phone

1. With the handset down
2. Press the **ON/OFF** button
3. Press the **PROG** button
4. Dial * *
5. Dial **9999**
6. Press line button **8**
7. **8** is displayed in the telephone display
8. Enter **1000**
9. Press the **HOLD** key
10. The display shows **0 :YYMMDD**
11. Enter the year (**YY**)
12. Enter the month (**01-12**)
13. Enter the day (**01-31**)
14. Press the **HOLD** key
15. The display shows **1 :HHMM**
16. Enter the hour (**00-24**)
17. Enter the minutes (**00-60**)
18. Press the **HOLD** key
19. The display shows **2 :D**
20. Enter the day of the week **1=Mon 2=Tue 3=Wed 4=Thu 5=Fri 6=Sat 7=Sun**
21. Press **HOLD** to store
22. Press **ON/OFF** to finish

If you have any problems with the above, please call our

Support Department on 08450 34 55 66