



TECHNICAL HANDOUT

CHANGING THE DATE AND TIME ON THE

**Samsung Compact 1 & 2, DCS, iDCS100 & 500, ViP, 408a & 408i, 816,
OfficeServ 12, 100, 500, 7030, 7100, 7200 & 7400**

From any display Keyphone

1. Leave the handset on the hook
2. Press the **TRSF** button
3. Dial **200**
4. Dial **1234** then **1**
5. Press the **SPEAKER** button and dial **505**
6. Display shows W MM DD YY:HH MM
7. Using the number keypad, enter a number for the day of week
0=Sun 1=Mon 2=Tue 3=Wed 4=Thu 5=Fri 6=Sat
8. ...followed by the month (**01-12**) and then date (**xx**)
9. ...followed by the year (**XX**)
10. ...then the hour (**01-24**)
11. ...then the minutes (**00-59**)
12. Display shows W MM DD YY:HH MM
13. Press **SPEAKER**
14. Press the **TRSF** button to exit.

If you have any problems with the above, please call our

Support Department on 08450 34 55 66