



TECHNICAL HANDOUT

CHANGING THE DATE AND TIME ON THE

Samsung NX 828

FROM ANY KEYPHONE WITH A DISPLAY

1. Press **AUTO RDL**
2. Dial **20**
3. Enter customer passcode (default = **1234**)
4. Dial **1** to enable
5. Press **AUTO RDL** to save and exit
6. Press **AUTO RDL**
7. Dial **55**
8. The display will show **YY MM DD W HH:**
9. Enter the new year (**00**)
10. Enter the new month (**01-12**)
11. Enter the new date (**01-31**)
12. Enter the weekday (**0=Sunday 1=Monday 2=Tuesday 3=Wednesday 4=Thursday 5=Friday 6=Saturday**)
13. Enter the hour (**00-23**)
14. Enter the minute (**00-59**)
15. Press **AUTO RDL** to save and exit

**If you have any problems with the above, please call our
Support Department on 08450 34 55 66**